

GL09 - GSM Alarm Device

Best designed for battery powered GSM Unit

USER'S GUIDE




Product description

GL09 is a simple & easy to use GSM Detector which sends SMS and calls you in case of alarm events. Alarm event occurs in case of NO or NC ports changes.

- ✓ Compatible with GA09 Device;
- ✓ Wide power input voltage from DC5V to DC16V;
- ✓ Only a local GSM SIM card is required to operate the device;
- ✓ Each input port can be configured as NO or NC input type for alarm;
- ✓ Each alarm input can be Armed and Disarmed independently;
- ✓ “**RST**” line is used for programming or Reset the device;
- ✓ DIP Switch when at ON Position, then unit will go to “Power-Save” status;
- ✓ Measure the power input voltage and support Low voltage alert;

Wide power input range from DC5V to DC16V power input is the main features of the GL09 box, user can preset a Low voltage alert limit, then when the power input is dropped below the voltage, then will send the alert SMS. This feature is very useful for battery operated situation.

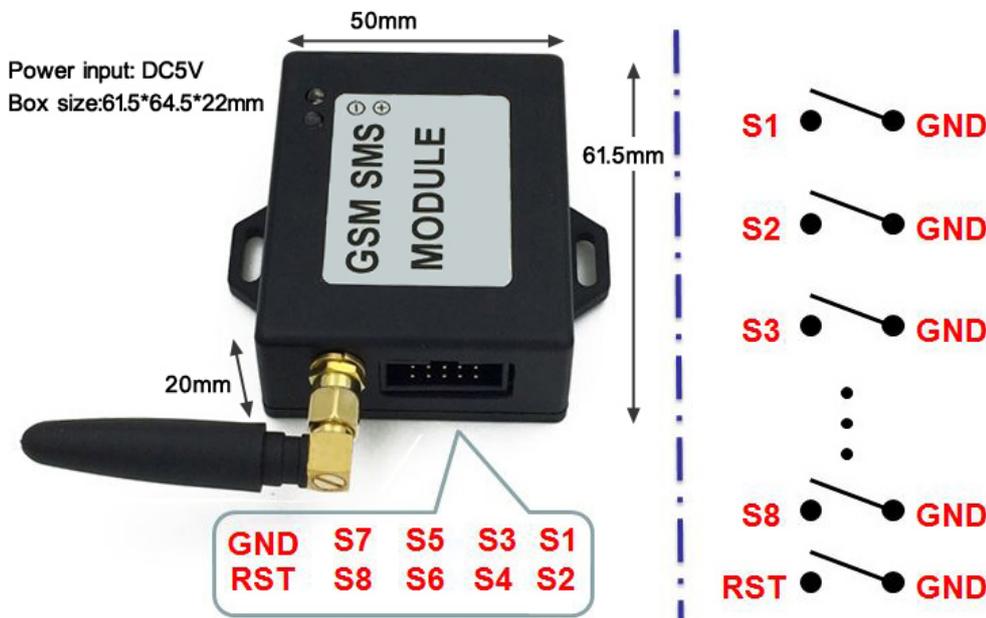

When any S1 to S8 input is shorted to GND, then will trigger the alarm



Start to program the device with simple SMS command

STEP1 : Power on the device with DC5 to DC16V power adapter or Battery

1. Short the **RST** line to GND for following SMS programming
2. Power On with DC5V (Power adaptor current should be at least 1000mA)
3. MCU LED will start to blink
4. GSM LED start to blink with fast flashing around two times per second
5. After connected to the GSM net, GSM LED will blink with slow flash once per second

STEP2: Start to register the Admin numbers for the Alarm box with SMS command

Program your Phone number into the device, that is used to receive the alert:

(1) Program the numbers to receive the Alert with SMS

@#232425353#45353365#43536363

(2) Program the numbers to receive the Alert with Phone Calls

�#45353365#43536363

Both Maximum numbers are three, if you only want to setup one or two number, then just use

@#232425353#45353365 or @#232425353

�#45353365 or �

STEP3: Preset the Alarm SMS text for each input channel (When the input port changes)

#1#Alarm input1 SMS text

#2#Alarm input2 SMS text

#3#Alarm input3 SMS text

#4#Alarm input4 SMS text

#5#Alarm input5 SMS text

#6#Alarm input6 SMS text

#7#Alarm input7 SMS text

#8#Alarm input8 SMS text

“Alarm input1 text” to “Alarm input8 text” should be changed to use the text that is easily to be understood by yourself

STEP4: Preset the SMS Text when alarm input are all released from GND

#0#All back to normal text

When all alarm input backed to normal, then will send the #0# pre-defined SMS text

STEP5: Setup the Timer for status report to ensure the proper functioning of the unit (“Keep Alive”)

%#Txx xx is the minutes user want to preset (Maximum 9999 minutes)

For example, can preset: %#T120, then every 120 minutes (2 hours), Device will report a status SMS to the first SMS alarm number.

If you setup it to zero: %#T0, then Report function will be disabled

STEP6: Select the alarm working mode

%#M1 Only SMS alarm report

%#M2 Only Phone calling alarm report

%#M3 SMS and phone calling alarm report

STEP7: Setup the Low voltage alert limit (**Only GL09 has this function**)

%#LV11.1 Setup the Low voltage alert limit at 11.1V (user can change it to suitable voltage)

STEP8: Disconnect the RST from GND to start the normally working

After disconnect the RST from GND, then only Admin numbers can use some limited SMS commands, such as the ARM and DISARM command

Start to use device with simple SMS command

STEP1: Connect the sensors output to each input port and define the input port type as NO or NC

*NC246

Then input port 2,4,6 are defined as NC input type and others will kept as NO type.

If you setup to *NC0, then All input port is NO type.

NO PORT: Connect two wires of your NO type device output or cable into terminal block wire & GND. It does not matter which one is first. This port is a “Normally Open” port and checks if there is any short-circuit between terminal 5 & 6.

NC PORT: Connect two wires of your NC type device output or cable into terminal block wire & GND. It does not matter which one is first. This port is a “Normally Closed” port and checks if there is any open-circuit between terminal 7 & 8.

Device provides required voltage by itself. Do not apply any external power on these terminal blocks which might cause damages. Also make sure that your external device does not apply any voltage, or sink or sank any currents. Your external device should only provide a relay output or short or open circuit.

STEP2: Arm or Disarm the input port (Only Numbers in the device memory can do this)

@#ARM00100100

From the right to left, the first is Input1 and the last is Input8, If preset to zero, then that input port will be disarmed (disabled), when preset to “1”, then input port is armed (enabled)

So :

@#ARM11111111 All input port is enabled (Armed)

@#ARM00000000 All input port is disabled (Disarmed)

Sometimes, we only want disarm the device temporarily for some minutes, then Use the Alarm phone number to call the device number and hang up after one or two ring back tone, then alarm will be disabled for 10 minute. Keep the ring until the device reject your calling, then alarm will be disabled for 60 minutes.

STEP3: How to read the Device data Log?

@#LOG10 (10 is the data Log numbers you want to read through SMS)

(Maximum 100 records can be read back, 4 records in every SMS. So if you input 100, then device will send back 25 Text SMS message)

STEP4: How to read the device status and parameters?

@#STATUS?

Install our App from Apple App store or google play store



GL09 use the Same App as the GA09. So:

Search the keyword “GA09” , you will find the right APP

Icon, and then press to install it

How to power the unit with battery

1. Select a Battery with DC5V to DC16V and power on the unit
2. Setup the suitable Low voltage alarm limit with “%#LVxxx” command, for example if use the DC12V Lead acid battery,then you can setup with “%#LV11.0”. Then when the voltage drop below the 11.0v,then will send the alert SMS to the first SMS alarm number.then user can go to change the battery as soon as possible.
3. Want to save the battery,then switch both the Red DIP Switch to “ON” position.then unit will go to “Power Save” working status, then GSM module will be sleep and only when alarm input triggered,then GSM module will be awake to send the alert SMS.Of course,even when in “Power-Save ”status,unit will also send the “keep-alive” report SMS at the preset timer.

Fast Q&A and Troubleshooting

1. How to Reset the Device:

Short the RST to GND, and then send the SMS command “ RESET ”.After RESET, it will empty all the SMS alarm and phone call alarm phone numbers in the memory and also device will be in the Only SMS alarm report Mode (M1 mode)

2. What is the uses of the RST line input

RST line is used to program the device or RESET the device.

Before SMS programming the device,Short the RST to GND, and then start to send the SMS command to program

After programming the device,RST line should be disconnected from GND to protect the device

3. Why the GSM LED always flash quickly?

- (1) SIM card in the device must support the GSM (2G) net
- (2) Try to push the SIM card out and push it into the slot to test again
- (3) Try to change another SIM card from other SIM card provider to test again
- (4) If you still can't sort the problems ,then please contact the seller for service

4. Why the MCU LED always kept ON even wait more than 70 seconds ?

That means device didn't recognize the SIM card properly or no SIM card inside.then you can try to push the SIM card out and push it into the slot to test again and wait around 70 seconds.If MCU LED still cannot start to flash,then please change another SIM card to try again

5. If one alarm input is exist and another alarm input is triggered,then what will happen?

Device will send the Combined SMS alarm text

6. What is the maximum length of the alarm SMS text

The maximum text length is 10 characters

7. How to simply disable the alarm input and go to Disarm temporarily?

Use the Alarm phone number to call the device number and hang up after one or two ring back tone,then alarm will be disabled for 10 minute. Keep the ring until the device reject your calling,then alarm will be disabled for 60 minutes.

7. How to setup the device to the Alarm when the battery voltage is low ?

Use the command %#LV11.1 to setup the voltage to 11.1v, then when batter voltage is lower than 11.1v, will send the alarm SMS. You can change the voltage limit with your battery specification.

How to get the fast service from supplier?



Contact us through the service email:
wafer@waferstar.com



Also can use our online service
Skype: wafer-service




Fast sample order, our shopping store
<http://www.wafer-shopping.com>



Visit our company website at:
<http://www.waferstar.com>

Sample SMS setting map

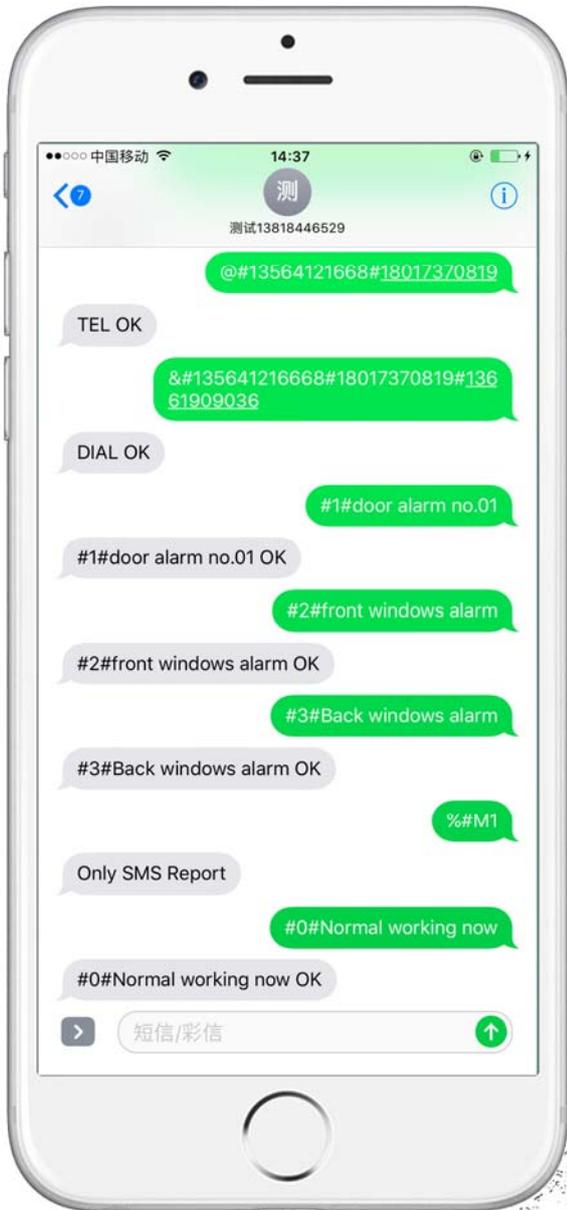

Preset the alarm SMS receiver

Preset the alarm phone calling receiver

Preset the alarm SMS for S1 input

Preset the alarm SMS for S2 input

Preset the alarm SMS for S3 input

Preset the working mode to M1

Preset the normal working SMS text